

INSTALLING GUTTERGLOVE ON SPANISH TILE

One of the many unique features of Gutterglove is its versatility of being able to be installed on a wide variety of roof types. Because Gutterglove's low profile is barely visible to the homeowner after being installed, it makes it an attractive choice for those who have beautiful million dollar homes like the one below. This particular home has a Spanish Tile roof with several hundred feet of gutter and over 30 mitered corners.



1. This gutter is a 5 inch Ogee style. From the measurement that can be seen in **Photo D** at the bottom left, we can tell that Gutterglove is too deep for this gutter. Due to Gutterglove's special design, we are able to trim the back of Gutterglove off so it will fit.


2. When installing Gutterglove where there is a metal bird stop supporting the tile, we need to make sure that there is a ledge to support the back. Fortunately, on this tile roof, the roofing company left a 1/2 inch ledge in the back. In the event this ledge is not present, you would need a support bracket installed in the back. You can also use the screw support method as with the flat roof install technique.

3. Another concern to be aware of is to make sure that Gutterglove still has a slope towards the outer lip of the gutter. With this installation, we have around a 10 degree slope. This helps debris to fall off during the rains and winds.

4. In **Photo D** to the left, we are measuring to see what the depth is. We will then transcribe this unto Gutterglove and trim off the back. Being able to trim off the back of Gutterglove makes it so universal to fit any gutter. In this photo, the measurement looks to be around 4.25 inches.



FOR BEST RESULTS OF DEBRIS SHEDDING OFF OF GUTTERGLOVE, PLEASE INSTALL GUTTERGLOVE AT THE SAME PITCH OF THE ROOF. THIS REQUIRES LOWERING THE GUTTER! In most cases the homeowner doesn't want to pay an extra fee to have their 'existing gutters' lowered and won't have you do it. However, when installing new gutters, make sure to lower them so Gutterglove is at the same pitch as the roof.

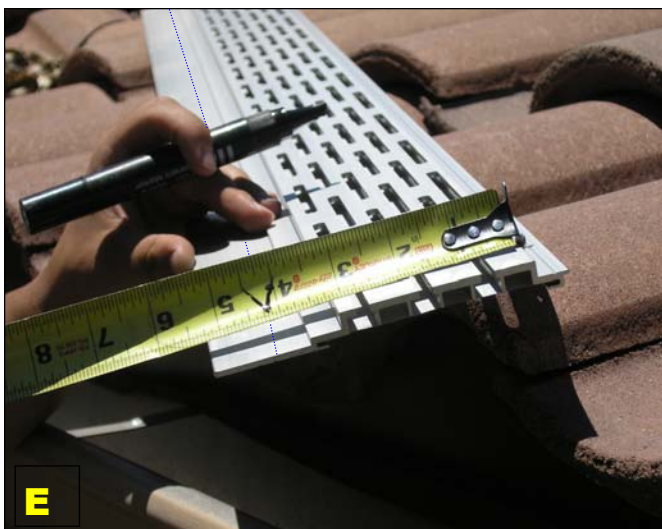

5. You can see where the 4.25 inch mark is. We will now trim this back part of Gutterglove off where the blue dotted line is.



6. Make sure to wear safety goggles when using power cutting tools! Also, DO NOT USE an electric power tool until you are fully and properly trained!



7. Next insert Gutterglove as in **Photo G**. Then screw the five foot section of Gutterglove down. When it's all in, it will look like **Photo I** above.



8. **VERY IMPORTANT!** On these types of roofs where there are large upward corrugations (see #1 in **Photo J** above) the finger fastener **MUST** go under the upward corrugation. If you put the finger fastener on the lower corrugation, so much water comes down that it may run off the finger!